



CONNECTION TO 3-PHASE ALTERNATING CURRENT

120 V

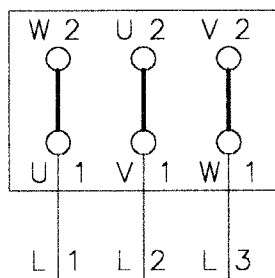


220 V

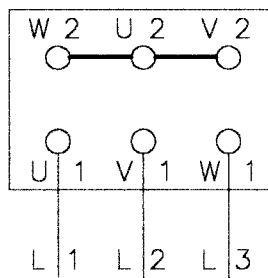


CHANGING THE SENSE OF ROTATION REQUIRES THE RECIPROCAL EXCHANGE OF TWO SUPPLY WIRES.

CONNECTION TO 1-PHASE AND 2-PHASE ALTERNATING CURRENT

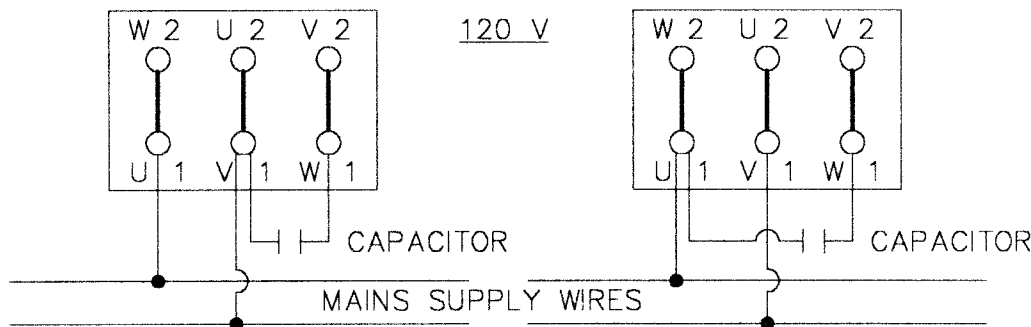

CHANGING THE SENSE OF ROTATION REQUIRES THE CONNECTION OF THE CAPACITOR WITH THE OTHER SUPPLY WIRE.

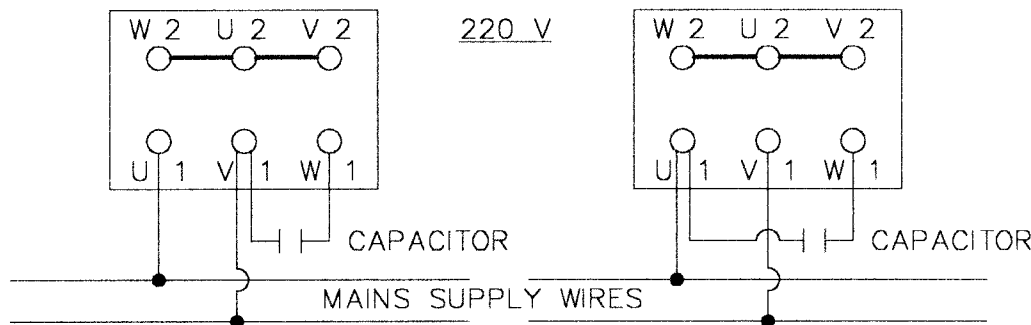

CAPACITORS FOR VENTUS BLOWERS

	110vac	120vac	208vac	220vac	240vac
0.10HP	8-10MFD	8-10MFD			
0.18HP	16MFD	16MFD			
0.25HP	34-36MFD	34-36MFD	12MFD	10MFD	10MFD
0.45HP	50-56MFD	50-54MFD	16MFD	16MFD	14MFD
0.75HP	75-85MFD	75-82MFD	20MFD	20MFD	20MFD
1.00HP	130MFD	120MFD	40MFD	35MFD	30MFD

OSI PART #	MFD
8701.04	4
8701.10	10
8701.12	12
8701.14	14
8701.16	16
8701.20	20
8701.25	25
8701.30	30
8701.35	35
8701.40	40
8701.50	50
8701.60	60
8701.80	80