

## **Servicing Instructions For Ventus Blowers 2800 (3360) r.p.m models**

Before use both bearings must be lubricated with the oil supplies (approx. 2-3 ml for each bearing). Continuous lubrication of the bearings is provided for by virtue of the bearing construction. Relubrication is only necessary after approx. 10,000 working hours (about 10 years of normal use). The oil points are covered by small, easily removable, plastic dust caps and only our synthetic oil should be used for lubrication. Please replace the dust caps after oiling.

Please ensure that the blower is rotating correctly. A small red dot can be seen through the transparent cap on the blower motor. The direction of rotation must be as indicated by the arrow on the blower casing.

**This blower should not be dismantled, which would result in invalidation of the guarantee.**

---

D-97984 Weikersheim – Germany – Postfach 11 33 – Tel. +49 (0) 79 34/91 60-0  
u. 9161-0 – Fax +49 (0) 7934/6 16 – E-Mail: [info@laukhuff.de](mailto:info@laukhuff.de)